

INSTALLING WINRTU TEST

IMPORTANT: Run Windows Update and uninstall all versions of WinRTU Test before proceeding with this installation.

1. Download the WinRTU zip file to your computer and extract the files(in Windows 7, right click the zip file and select Extract All from the popup menu)
2. Browse to where you extracted the WinRTU Test files and locate setup.exe. Double-click setup.exe to begin installation. The message "Copying Files, please stand by" appears on your screen.
3. Click OK in the WinRTU Test Setup dialog box. At the next dialog box, you can change the directory that WinRTU Test is installed to.

The default directory is c:\Program Files\WinRTUTest.

NOTE: If you select a directory other than the default, make a note of it. When you run WinRTU Test for the first time, you will have to install WinRTU Test's documentation to the same directory.

4. When you are ready to begin installing the program, click the button that starts the installation (the large button with a picture of a computer on it).
5. In the Choose Program Group dialog box, choose where you want the WinRTU Test shortcut to be placed and click Continue.
6. WinRTU Test setup begins. A progress bar shows setup progress. Click OK at the dialog box that states WinRTU Testxs setup was successfully completed.
7. Start WinRTU Test. A dialog box, which states that new documentation was found, appears. Click Yes to install WinRTU Testxs documentation.

NOTE: If you did not install WinRTU Test to the default directory (see step 3, above), take the following steps. If the documentation isn't in the same directory as the program,

WinRTU Test will not be able to locate it.

- A. Use the Browse button to navigate to the directory where WinRTU Test was installed.
- B. Open the WinRTUTest folder by double-clicking it.
- C. Click the Documents folder once to select it.
- D. Click OK to return to the WinZip Self-Extractor dialog box, and then click Unzip.
- E. When the documentation files have been unzipped successfully, click OK.
- F. Click Close to close the WinZip Self-Extractor dialog box.
- G. To access WinRTU Test's User's Guide documentation, choose Documentation from the Help menu.

8. Click Unzip to begin installing the documentation. When the installation is complete, click OK. Click Close to exit the WinZip Self Extractor dialog box.
9. When you quit WinRTU Test, a dialog box appears asking if the new documentation installed correctly. If you click Yes, you won't be prompted to install the documentation the next time you start WinRTU Test.