

UPDATING A TCU800 OVER USB

AUTOMATIC PUMP CONTROL WILL NOT BE ACTIVE DURING THE UPDATE.
 PUMPS WILL HAVE TO BE CONTROLLED MANUALLY USING THE HOA SWITCHES.
 THE UPDATE PROCESS CAN TAKE UP TO 15 MINUTES TO COMPLETE.

 
- 1 Insert the update USB into any free port on the front of the TCU800.


For instructions on how to properly prepare an update USB, follow procedure *TCUOP0400: PREPARING A TCU800 UPDATE USB*.




- 2 Place the HOAs into the off position.

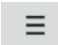

 
- 3 Tap the hamburger menu  in the top left of the screen.

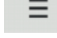If you do not see the  icon, tap anywhere on the screen once and it will appear.

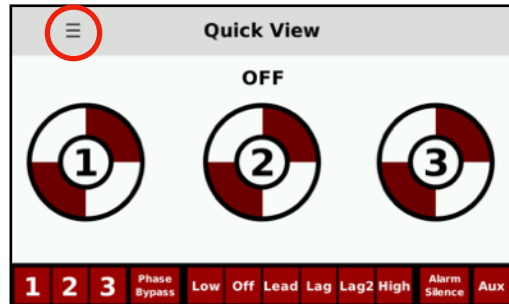


- 4 Tap **About**.


If you do not see this option, scroll down by sliding your finger up within menu pane.

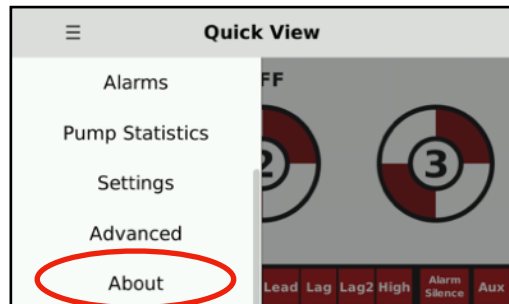

5 Tap **System Update**.

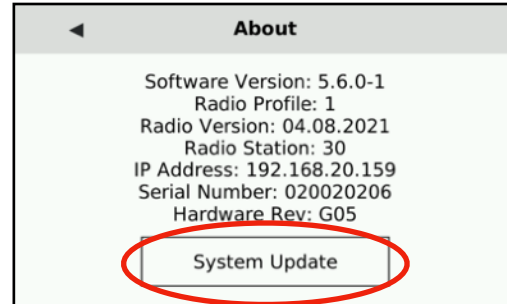


6 Tap **Check for Update** once the update screen has finished loading.

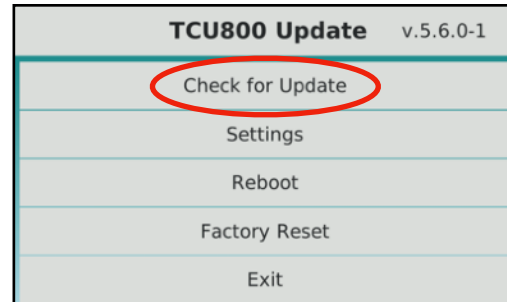

7 Once the check completes, one of two screens will show up.


If you see this screen →
There is an update available.

Tap **Yes**.
Continue to step 8.

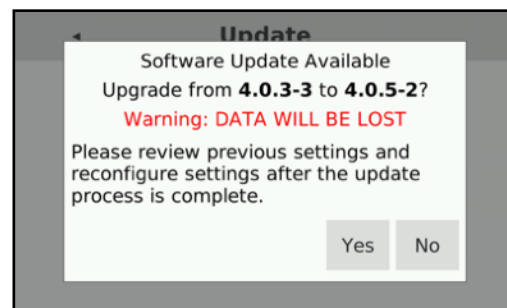


If you see this screen →
The TCU800 is up-to-date, or the update USB has not be setup properly.

Tap **Ok**.
Skip to step 11.

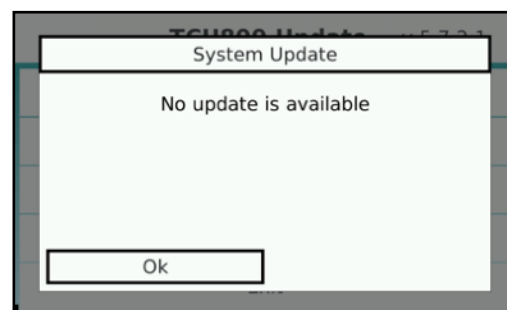

8 Wait for the update to complete.

The green bar shows the overall progress, while the scrolling text displays key milestones in the update.

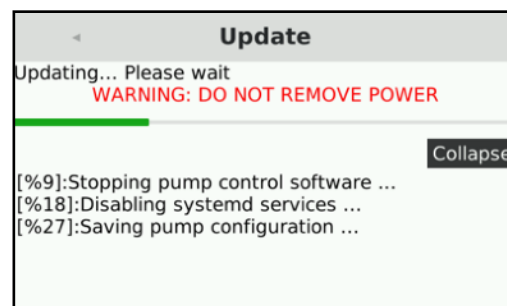

- 9 Wait for the screen indicating that the upgrade is complete.

The TCU800 will now reboot.



- 10 Remove the update USB from the TCU800.

If the update USB is left in the TCU800 while it starts up, it will boot into the update menu INSTEAD of the main screen.

THE FOLLOWING STEPS ARE ONLY APPLICABLE IF THERE WAS NO UPDATE AVAILABLE IN STEP 7

- 11 Tap **Exit** to return to the main screen.

The HOAs can now be returned to the AUTO position, and the TCU800 can will normal operation.

